

# Tips for use

## General

The Cold Water Filter improves taste and smell by reducing the level of chlorine in the water. Flush the filter before first time use, to remove carbon residue, by running the cold water on the filtered setting for 5 minutes. This excess carbon residue can turn the water black for a few seconds. This is not harmful.

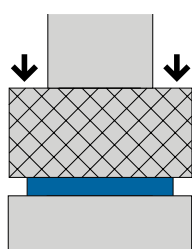


image 1

## How to dispense filtered water

Filtered water can be dispensed by pushing and holding down the textured ring on the Flex, Fusion or Nordic single tap until the LED light turns blue, and turning it (image 1). The blue light will remain lit while filtered water is activated.

## Replace the filter's cartridge

Due to hygienic reasons the filter's cartridge must be replaced every 12 months, regardless of volume of usage. After 12 months, an alarm will sound to indicate that the cartridge needs to be replaced.

The filter is installed underneath the counter top. Instructions on how to replace the cartridge are available on the cartridge label.

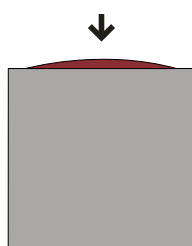


image 2

## Snooze the alarm

When the alarm sounds it can be snoozed for 72 hours by pressing the red button, located on the Cold Water Filter (image 2), providing time to order a new cartridge at [www.quooker.co.uk](http://www.quooker.co.uk).

## Flush after periods of non-usage

After periods of non-usage, for instance after holidays, it is good practice to flush through your Cold Water Filter to remove stale water. This can be done by simply running the filtered water for 5 minutes.

## Warranty and service

The warranty period is two years and covers supply of parts only. It does not cover labour costs. In case of a fault, first try resetting the system. This can be done by switching off the Quooker boiling water tank via the Q-shaped on/off switch on the top of the tank, waiting one minute and then switching the tank on again. If the problem remains, please contact your installer or supplier.

## Liability

The Cold Water Filter has been manufactured to the highest quality and design standards. In accordance with the warranty conditions, the manufacturer does not accept liability for any adverse consequences of using this product.

**QUOOKER UK LTD**

Beaumont Buildings Great Ducie Street Manchester M3 1PQ (UK)

**Telephone** +44 (0)207 9233355 **E-mail** [info@quooker.co.uk](mailto:info@quooker.co.uk) **Internet** [quooker.co.uk](http://quooker.co.uk)

